








DATA SHEET

LuminOx O₂ Sensors LuminOx Evaluation Interface Board

FEATURES

- Allows quick and easy evaluation of the LuminOx sensor¹ with minimum effort and / or design work
- Interface mounted screw terminals for easy wiring
- The interface simultaneously provides three outputs:
 - RS232 (serial interface voltage levels)
 - RS485 (Modbus RTU) port allows multiple sensors to be addressed on a bus
 - 0—5V analogue output for basic measurements of oxygen only



Housing  COMPACT	Supply Voltage  5 V VOLTAGE	Operating Temp  0°C to +50°C TEMPERATURE	Output Digital  RS232  RS485	Analogue Output  0 - 5 V VOLTAGE	Response Time²  < 30 secs
--	--	---	---	---	--

BENEFITS

- Converts the LuminOx TTL level RS232 output into three standard industrial outputs
- Auto detects ppO₂ or O₂% variants of LuminOx sensor

TECHNICAL SPECIFICATIONS

Supply voltage (Vs)	4.75—5.25V _{DC}
Supply current (Is)	<50mA
Output Type	RS232, RS485 (Modbus RTU) and 0—5V
Temperature	
Operating:	0°C to +50°C
Storage:	0°C to +60°C

PERFORMANCE SPECIFICATIONS³


LuminOx sensor compatibility	0—25% (O ₂ version) 0—300mbar (ppO ₂ version)
Resolution	
Digital outputs	0.01% / 0.1mbar
Analogue output	0.01V

NOTES

- 1) LuminOx sensor sold separately.
- 2) LuminOx sensor response time.
- 3) At ambient conditions. All performance measurements are at STP unless otherwise stated. Following extreme temperature fluctuations, re-calibration may be required.

OUTLINE DRAWING

All dimensions shown in mm. Tolerances = ± 1 mm.

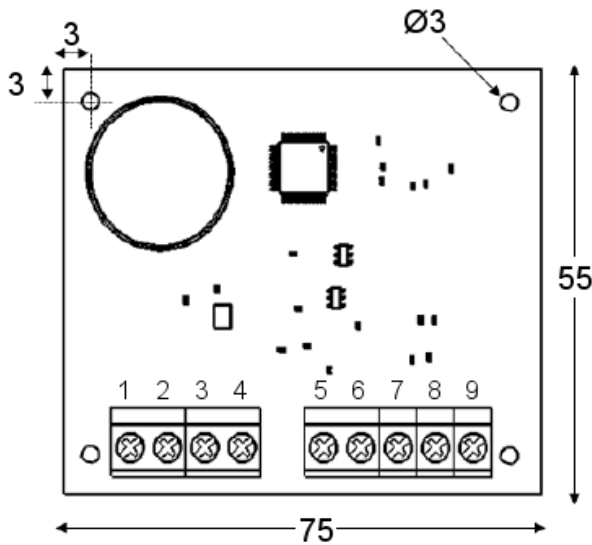

The sensor should be treated as an electronic component and handled using the correct ESD handling precautions.

1. RS232 Rx & Tx and RS485 A & B (pins 5, 6, 8 and 9) are referenced to the RS232/RS485 GND (pin 7). A connection should be made between pin 7 and the reference or common connection of the RS232 serial port or RS485 Bus.
2. Care should be taken when connecting the RS485 A & B connections to your system. The EIA-485 signalling specification states that signal A is the inverting or '-' pin and signal B is the non-inverting or '+' pin. This is in conflict with the A & B naming used by a number of differential transceiver manufacturers, including the transceiver used in the OXY-LC-485 interface. Therefore always ensure the '+' of the OXY-LC-485 interface is connected to the '+' input of the RS485 Bus and the '-' of the OXY-LC-485 interface is connected to the '-' input of the RS485 Bus.



ORDER INFORMATION

Specify the part number shown below when ordering.

L O X - E V B



ELECTRICAL INTERFACE

Refer to [Outline Drawing](#) above.

Pin	Designation
1	Vs (+5V _{DC})
2	GND (0V)
3	0—5V GND (0V)
4	0—5V Signal
5	RS232 Rx
6	RS232 Tx
7	RS232/RS485 GND (0V)
8	RS485 A (+)
9	RS485 B (-)



CAUTION

Do not exceed maximum ratings and ensure sensor(s) are operated in accordance with their requirements.
Carefully follow all wiring instructions. Incorrect wiring can cause permanent damage to the device.
Do NOT use chemical cleaning agents.

Failure to comply with these instructions may result in product damage.

INFORMATION

As customer applications are outside of SST Sensing Ltd.'s control, the information provided is given without legal responsibility. Customers should test under their own conditions to ensure that the equipment is suitable for their intended application.

General Note: SST Sensing Ltd. reserves the right to make changes to product specifications without notice or liability. All information is subject to SST Sensing Ltd.'s own data and considered accurate at time of going to print.

深圳市杰晟兴电子有限公司 JM Components Limited

地址: 深圳市福田区中航路7号鼎诚国际大厦南座2007室

手机: 13662266995 马少良 电话: 0755-83951311

官网: cn-sensor.com

邮编: 518031

传真: 0755-83952401

电邮: jackson@jmcomponents.com